 


### Installation Directions

1. Switch off mains power supply
2. Connect Dimmable Driver to mains voltage cable (L, N) Do not connect downlight to driver if driver is live. Inrush current from live driver will cause instant downlight failure. Do not switch secondary side.
3. Carefully install downlight into pre-cut 150mm hole.
4. Turn on mains power and switch on lighting circuit.


### Approved Clearances

Note: 50mm side clearance from heatsink to building elements and insulation required. 50mm height clearance from heatsink to building elements and insulation required.

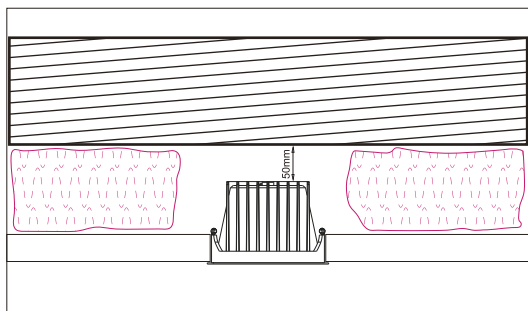

#### Example 1:


50mm Approved Height Clearance. Building elements or insulation cannot abutt rear of fitting.

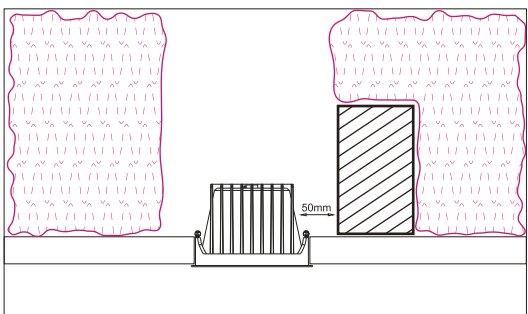

#### Example 2:

50mm Approved Side Clearance. Building elements or insulation cannot abutt side of fitting. Insulation cannot abutt and cover fitting.

**Install driver above insulation**

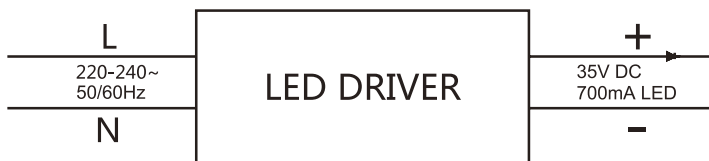

**Cutting of holes prior to receiving goods is entirely at the risk of the installer.**